

## Using the Serger

 
### Step 1: Remove the cover

- Lift the dust cover off the serger and set it aside.




### Step 2: Lower the spool stand

- Fold the spool stand down flat.

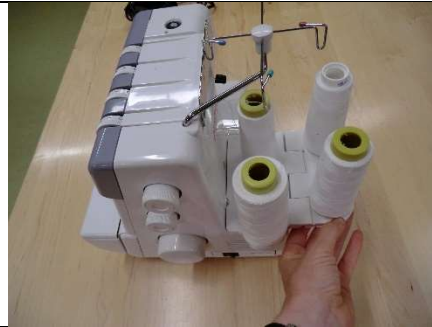


### Step 3: Raise the thread guide bar

 - Lift the thread guide bar up until it locks.

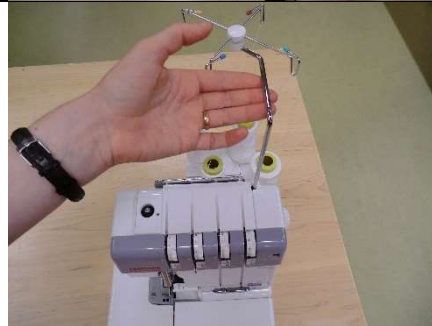

### Step 4: Remove the tool bin

 - Remove the tool bin from the fabric waste bin and set it aside.

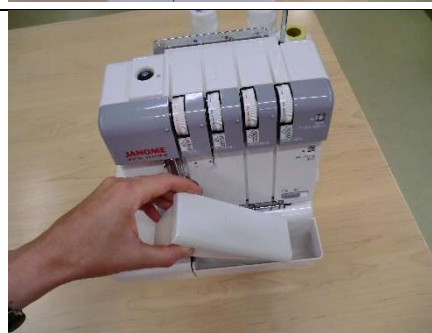

### Step 5: Plug in the foot control pedal

- Plug the foot control pedal cord into the side of the serger.
- Place the foot control on the floor.
- Plug the other end of the cord into an outlet.



**Step 6: Turn the serger on**

- Press the power switch on the side of the serger

**Step 7: Sew**

- With the presser foot down, begin to sew. The feed dogs will pull the fabric in without needing to insert it under the presser foot.
- Make sure that there is enough overhang for the serger to trim the edge of the fabric as it sews.

**Step 8: Leave a thread tail**

- Continue sewing off the edge of the piece to create a thread tail. Pull lightly on the fabric as you do so to help extend the tail.
- Cut the threads on the serger thread cutter. This ensures that a thread tail of proper length remains on the serger.

**Step 9: Empty the fabric waste bin**

- Lift out the fabric waste bin, empty the fabric scraps, and return it to its place.

**Step 10: Put everything away**

- Refer to steps 1-6 but do them in reverse to prepare the serger to be put away.

